


OO Scale Transport Depot


Thanks for purchasing one of my kits, This kit just requires glue and scissors for the windows.



Firstly find the front main wall, front door (One with the smaller surround) and the main plain card section.

Lay face down on a clean surface and glue the plain card in to place make sure is's flush with the bottom.

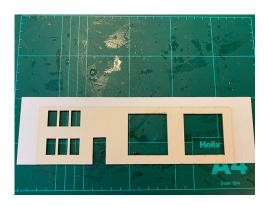


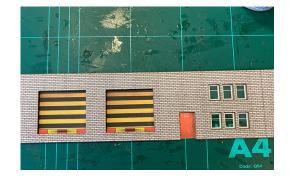

Then glue the shutter doors in along with front door and windows.

Find the two U shape plain card and repeat for the two rear fire doors.

find the two larger plain gables (the slightly smaller one is for the center divider) glue as shown both ends.

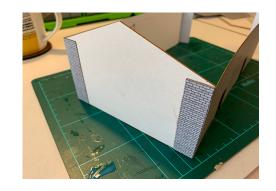

Next the floor can be fixed in, I pushed it in from the top then glued around the inside, Once dry you can install the last gable in the center.



Page 1